

Quick Installation Guide



VX-160KIT - VDSL2 SFP Module

VDSL2 Interface Pin Assignments (RJ-45)

The VDSL2 interface is a standard eight-pin modular jack.

The table below displays the pin out assignment.


Pin Number	Description
1	Not Used
2	Not Used
3	Not Used
4	Analog Input
5	Analog Input
6	Not Used
7	Not Used
8	Not Used

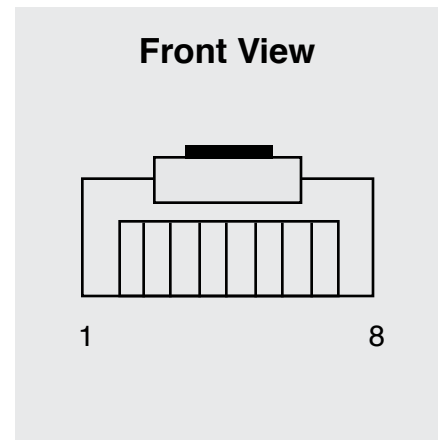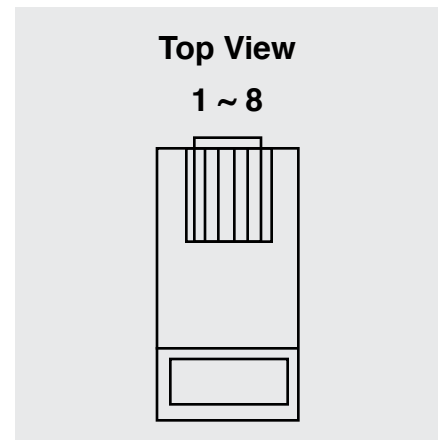

LED1 (Orange)
CO/RT Indicator



LED2 (Green)
DSL Link Status Indicator

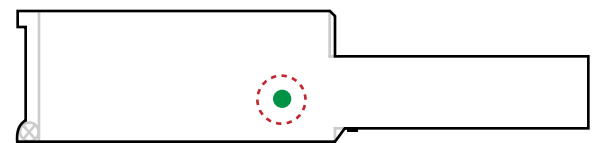

STEP 1:

Insert the VDSL2 SFP Module (RT) to the host device. LED1 will turn orange as an indicator of RT. Check for physical connection. You shall see LED2 flashing green slowly as soon as you insert the device.

STEP 2:

Insert the VDSL2 SFP Module (CO) to the host device. Check for physical connection. You shall see LED2 flashing green slowly as soon as you insert the device.

STEP 3:

Link time takes about 60 seconds. Fast flashing green LED2 indicates DSL training. LED2 on both VDSL2 SFP Modules (CO & RT) turns solid green when the devices link up.

LED Display Behaviors

LED	Color	Active	Description
LED1	Orange	off	CO side
		on	RT side
LED2	Green	off	No DSL connection
		blinking	DSL trying to train
		on	DSL link is on